

Manufacturer	Barcode reader type				MONITOUCH type			Remarks
	Model	1D barcode	2D barcode	Interface	V9	TS2060	V8	
MARS TOHKEN SOLUTION	THIR-6000B	✓	✓	RS-232C	✓	✓	✓	*1
		✓	✓	USB-A	✓	✓ *2	✓	*3
	THIR-6000U-RF	✓	✓	USB-A	✓	✓ *2	✓	
	THIR-6780U	✓	✓	USB-A	✓	✓ *2	-	
	THIR-6781R	✓	✓	RS-232C	✓	✓	✓	
	THIR-6781U	✓	✓	USB-A	✓	*4	-	
	THLS-6800	✓	-	USB-A	✓	✓ *2	✓	
	MVF-300-V	-	✓	RS-232C	✓	✓	✓	
	MVF-500	✓	✓	RS-232C	✓	✓	✓	
	MID-100	✓	✓	RS-232C	✓	✓	✓	*1
		✓	✓	USB-A	✓	✓ *2	✓	*3
	MCR-F100U	✓	✓	USB-A	✓	*4	-	
	MCR-H200	✓	✓	USB-A	✓	✓ *2	✓ *5	
	MCR-H700B	✓	✓	RS-232C	✓	✓	✓	*1
		✓	✓	USB-A	✓	✓ *2	✓	*3
	MCR-H700R	✓	✓	RS-232C	✓	✓	✓	
MCR-H700U	✓	✓	USB-A	✓	✓ *2	✓		
KEYENCE	BL-600 Series	✓	-	RS-232C	*4	✓	✓	
	HR-30UB	✓	-	USB-A	✓	✓ *2	✓	
	HR-40UB	✓	-	USB-A	✓	✓ *2	✓	
	HR-50UB	✓	-	USB-A	✓	✓ *2	✓	
	HR-30R	✓	-	RS-232C	✓	✓	✓	
	HR-40R	✓	-	RS-232C	✓	✓	✓	
	HR-50R	✓	-	RS-232C	✓	✓	✓	
	HR-100	✓	✓	RS-232C	✓	✓	✓	*6
		✓	✓	USB-A	✓	✓ *2	✓	*7
	HR-100B	✓	✓	RS-232C	✓	✓	✓	*8
		✓	✓	USB-A	✓	✓ *2	✓	*9
SR-1000W	✓	✓	RS-232C	*4	✓	✓		
DENSO WAVE	GT20B-SM	✓	-	RS-232C	✓	✓	✓	
		✓	-	USB-A	✓	✓ *2	✓	
IDEC (formerly Gryphon)	GD4430	✓	✓	RS-232C	*4	✓	✓	
		✓	✓	USB-A	*4	✓ *2	✓	

*1 Use an optional wireless adapter TMA-6000.

*2 Connectable with TS2060i only. (TS2060 does not have a USB-A port.)

*3 Use an optional wireless adapter TMA-6000U.

*4 Unverified

*5 MCR-H200 can be connected by scanning a symbol to enable USB communication settings for specific HMI in configuration guide of MCR-H200.

*6 An optional USB communication cable HR-1C3RC from KEYENCE is required.

*7 An optional USB communication cable HR-1C3UN from KEYENCE is required.

*8 An optional communication unit HR-UC1 + an RS-232C communication cable HR-1C3RB from KEYENCE are required.

*9 An optional communication unit HR-UC1 + a USB communication cable HR-1C3UN from KEYENCE are required.