

<Function Enhancements> USB Camera Functions Are Improved!

Before

While using the event recording function*, recorded video files cannot be played in RUN mode.

If it is absolutely necessary to play a video, switch to Local mode and start the video player.




* The event recording function records video at all times and is used to save video from immediately before occurrence and resetting of an alarm.

Temporarily stop event recording!

After

Videos can be played in RUN mode!

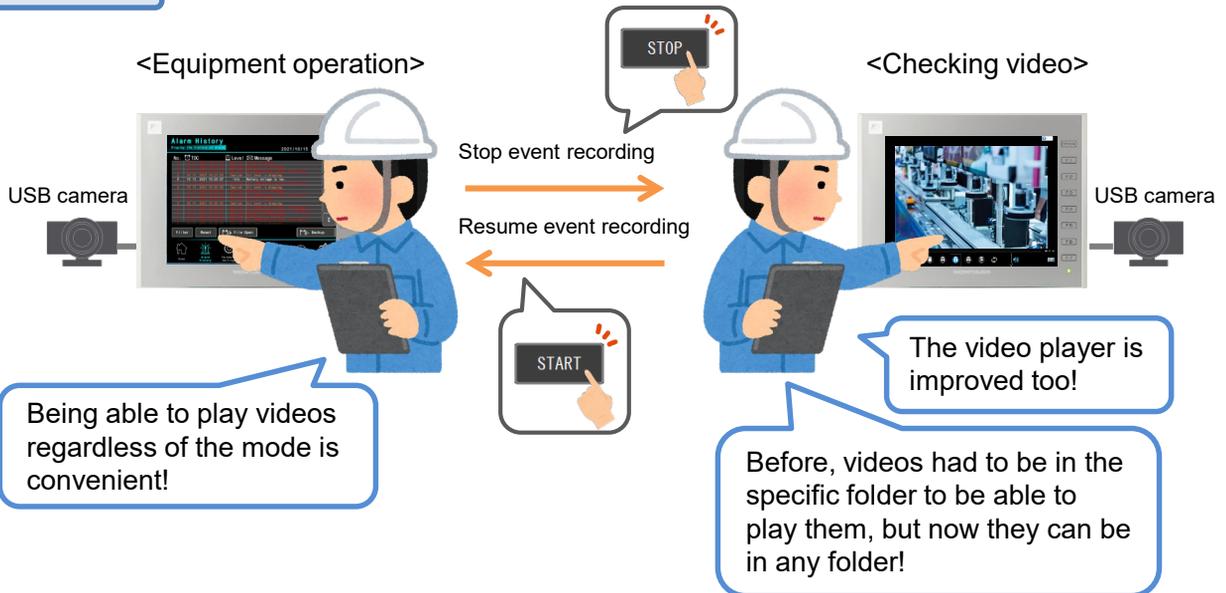

So why can videos be played?

Add a macro for stopping and starting event recording in RUN mode to switches!



Check the next page for details! 

Macros to Use

STOP


“USBCAM_REC STOP”

Just add this one macro line to each switch!
(Ver. 6.0.36.0 and later)

START

“USBCAM_REC START”

By using these macros, you can also solve the problem of screen changeovers lagging while event recording is functioning!

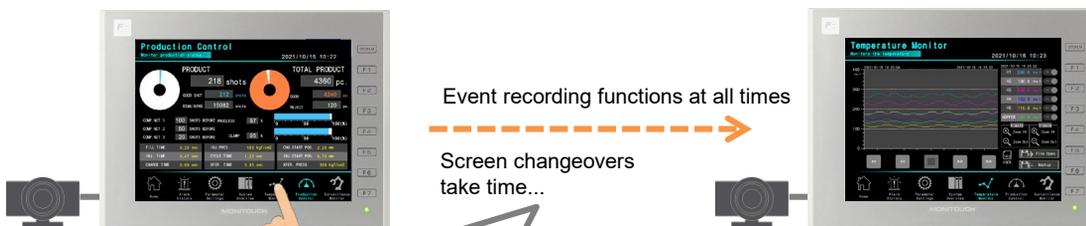

Execute these macros before and after screen changeover to **interrupt and resume event recording!**

There are lots of ways to build macros!

You can freely decide when to stop and resume recording!




News about the USB camera function

Until now, only landscape orientation was possible.


Now you can use **portrait orientation!**

(Ver. 6.1.3.0 and later)

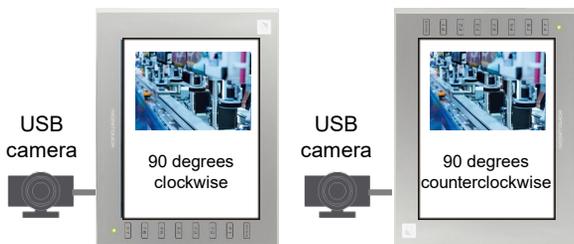

Snapshots can now be taken!

(Ver. 6.1.1.0 and later)

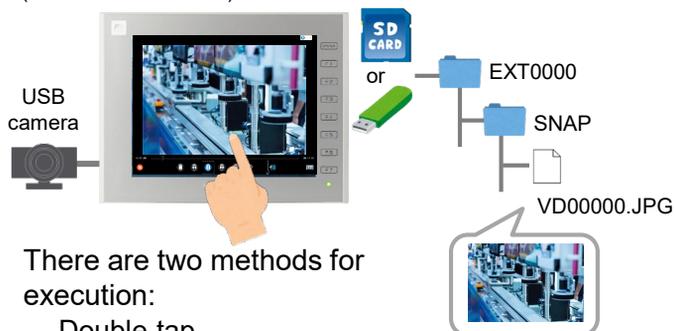

There are two methods for execution:

- Double-tap
- Macro command
USBCAM SNAP
USBCAM MEMORY

* For details, refer to the V9 Series Reference Manual 2 or the V9 Series Macro Reference Manual.



Try out the improved USB camera functions!

Hakko Electronics Co., Ltd.

Overseas Sales Section

TEL: +81-76-274-2144 FAX: +81-76-274-5136

<http://monitouch.fujielectric.com/>