

Component parts information NEW
Fuji Electric FRENIC HVAC/AQUA


Issue No. 42
 November, 2013

Merits by using the component parts

- It is easy to monitor and set parameters of the specified inverters for air conditioning and water treatment systems (FRENIC HVAC/AQUA)
- Without modifying your screens, the parts are usable by placing it on a screen.
- The number of working processes can be reduced because you only need to place the parts on a screen


Parts features

System Configuration

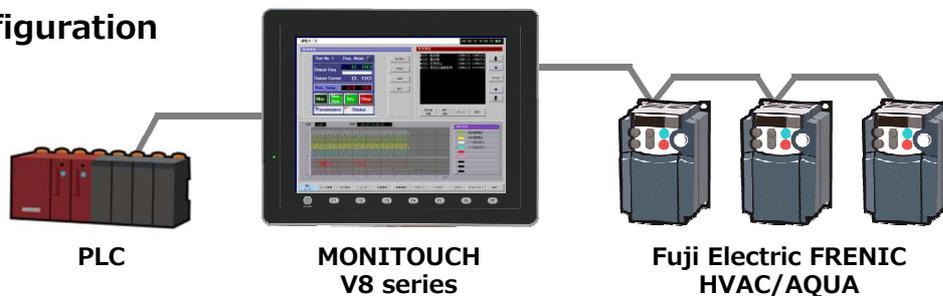

Feature	It is easy to monitor and set parameters by just placing the parts.
---------	---

You can use the part by just placing on a screen because the parts with screens to monitor and to set parameters have already been prepared.

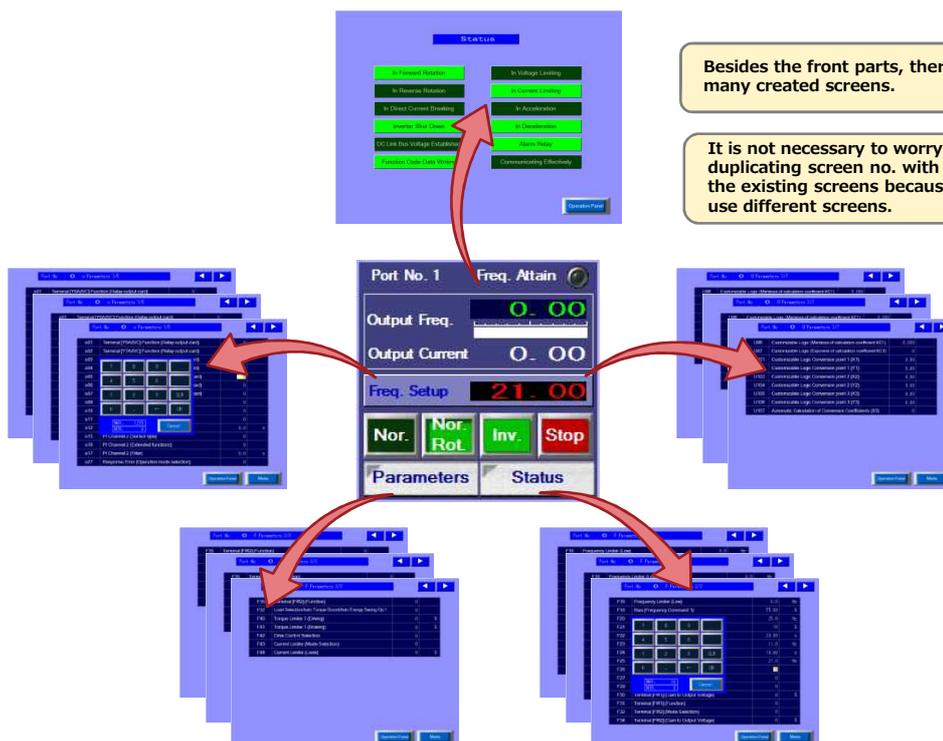

Besides the front parts, there are many created screens.


It is not necessary to worry about duplicating screen no. with the existing screens because they use different screens.




It is possible to exchange the data between Inverter and PLC.

Data exchange is possible between an inverter and a PLC via MONITOUCH as a gateway
 *Transferring is executed by device memory map or macro.
 Data sharing, data writing, and data reading with PLC are possible.

[Device memory map setting image]

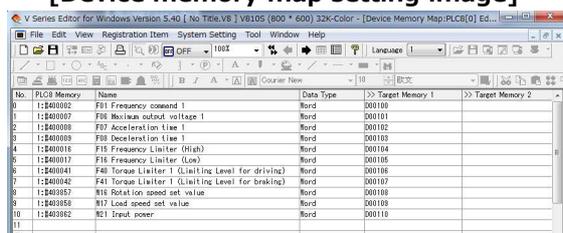

[Macro setting image]

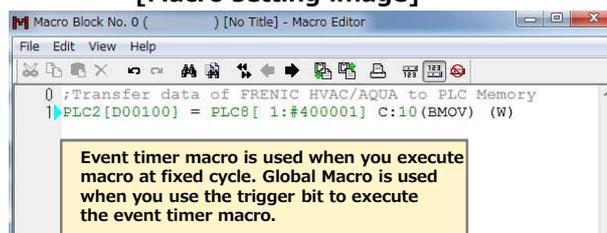

Download

Please download the component parts from the website below

<http://monitouch.fujielectric.com/site/support-e/download-index-01.html>

Parts specification

Models	Series	All V8 series
	Colors	64K, 32K, MONO
	Resolution	SVGA, VGA, QVGA
Device Conn. Setting	FRENIC HVAC/AQUA (MODBUS RTU)	
Supported Editor Ver.	V-SFT Ver. 5.4.27.0 or later	
How to place parts	"Parts" -> "Component Parts" -> "Inverter"	

About the operating procedure of the parts, please refer to the manual below.
 "Fuji FRENIC HVAC/AQUA (MODBUS RTU) Operation Manual"

* This manual is located in the V-SFT V5 installation folder "Parts/Components/Eng/Inverter".