

**\*\* For the V-SFT CD-ROM Ver.5.4.18.0 or earlier \*\***

## V-SFT Ver. 5/ Ver. 6 Update Procedure

This document explains how to update your V-SFT after installing it on a computer using a CD-ROM Ver. 5.4.18.0 or earlier.

Windows Vista/ 7 (32-bit)	Ver. 5.4.11.0~ / Ver. 6.0.0.0~
Windows Vista/ 7 (64-bit)	Ver. 5.4.19.0~ / Ver. 6.0.0.0~
Windows 8 (32-bit, 64-bit)	Ver. 5.4.28.0~ / Ver. 6.0.0.0~
Windows 8.1 (32-bit, 64-bit)	Ver. 5.4.37.0~ / Ver. 6.0.0.0~
Windows 10 (32-bit, 64-bit)	Ver. 5.4.42.0~ / Ver. 6.0.15.0~

Hakko Electronics Co., Ltd.

The ninth edition

August 2020

<Preface>

The default installation directory varies in accordance with the version of V-SFT and the OS of your computer. The procedure for installation is different depending on the version of CD-ROM/DVD-ROM.

Ver. 5.4.10.0 or earlier	Ver. 5.4.11.0 or later	Ver. 6
All OSs: C:¥Program Files¥*****  V-SFT V5 --- V-SFT Ver. 5 V-SFT V3 --- V-SFT Ver. 3 V6W --- V-SFT Ver. 2/ 1 UG00S-CWV5 --- POD EDITOR Ver. 5 UG00S-CWV4 --- POD EDITOR Ver. 4 UGW --- POD EDITOR Ver. 3	Windows XP-: C:¥Program Files¥V-SFT V5  Windows Vista or later: C:¥MONITOUCH¥V-SFT V5	All OSs: C:¥MONITOUCH  * Three folders, "Common", "User", and "V-SFT V6", are created.

\* If installing V-SFT Ver. 5 in "C:¥Program Files" on Windows Vista or later, it may not work properly.

<Points to be checked before installing V-SFT or POD EDITOR >

Check both OS in a computer and CD-ROM/ DVD-ROM Version for V-SFT or UG00S-CW, and use the table below to check whether the software can be installed on your PC or not and installation procedure before installing it.

		V-SFT CD-ROM/ DVD-ROM Version		
OS	Windows Vista or later 32-bit	Ver. 2.0.0.0 to 2.2.42.0 Ver. 3.0.0.0 to 3.0.15.0	Ver. 2.2.43.0 to 2.2.45.0 Ver. 3.0.16.0 to 3.0.24.0 Ver. 5.0.0.0 to 5.4.10.0	Ver. 5.4.11.0 or later Ver. 6.0.0.0 or later
	Installation	X	✓ (see page 3)	✓✓ (see page 6)
	Windows Vista or later 64-bit	Ver. 2.2.42.0 or earlier	Ver. 2.2.43.0 to 5.4.18.0	Ver. 5.4.19.0 or later Ver. 6.0.0.0 or later
	Installation	X	✓ (see page 3)	✓✓ (see page 6)

		UG00S-CW CD-ROM Version	
OS	Windows Vista or later 32-bit	Ver. 3.0.0.0 to 3.2.33.0 Ver. 4.0.0.0 to 4.0.10.0	Ver. 4.0.11.0 to 4.0.17.2 Ver. 5.0.0.0 to 5.0.10.3
	Installation	X	
	Windows Vista or later 64-bit	Ver. 3.0.0.0 to 3.2.33.0	Ver. 4.0.11.0 to 4.0.17.2 Ver. 5.0.0.0 to 5.0.10.3
	Installation	X	

X : This CD-ROM is not compatible. Please purchase the newest version of V-SFT DVD-ROM.

✓ : Install V-SFT or UG00S-CW by following the procedure explained in this manual.  
For details, refer to the "Install Procedure" on page 3.

✓✓ : This manual is not necessary for you. Install V-SFT to the PC by following the instructions of the installer. For updating V-SFT, refer to the "Update Procedure" on page 6.

<Installation Procedure>

\* Install the V-SFT editor with the authorization of the administrator.

1. Uninstall V-SFT Ver. 5

If V-SFT Ver. 5 is already installed on Windows Vista or later, you have to uninstall V-SFT Ver. 5.

Click the [Start] Menu → [All Programs] → [V-SFTV5] → [Uninstall]. About the details of uninstallation, refer to “V8 series Introductory Manual”.

If V-SFT Ver. 5 is not installed, go to step 2.

2. Run “setup.exe” in the V-SFT/ POD EDITOR CD-ROM

Insert your V-SFT CD-ROM or POD EDITOR CD-ROM in the PC.

When the following dialog is displayed, click “INSTALL”.

Example: V-SFT Ver. 5



3. Changing the installing directory

If your CD-ROM is V-SFT Ver. 5, click "Change..." on the [Choose Destination Location] dialog. Change the destination from the default "C:\Program Files\V-SFT V5" to as follows:

\* If you have V-SFT CD-ROM Ver. 3/ 2, or POD EDITOR CD-ROM Ver. 5/ 4, you do not have to change the destination.

However, V-SFT Ver. 3/ 2 or POD EDITOR Ver. 5/ 4 installed on Windows Vista or later cannot be used because they may not work properly.

[Destination folder]

< Before change >


C:\Program Files\V-SFT V5

< After change >

C:\MONITOUCH\V-SFT V5


Upper case letters

a space

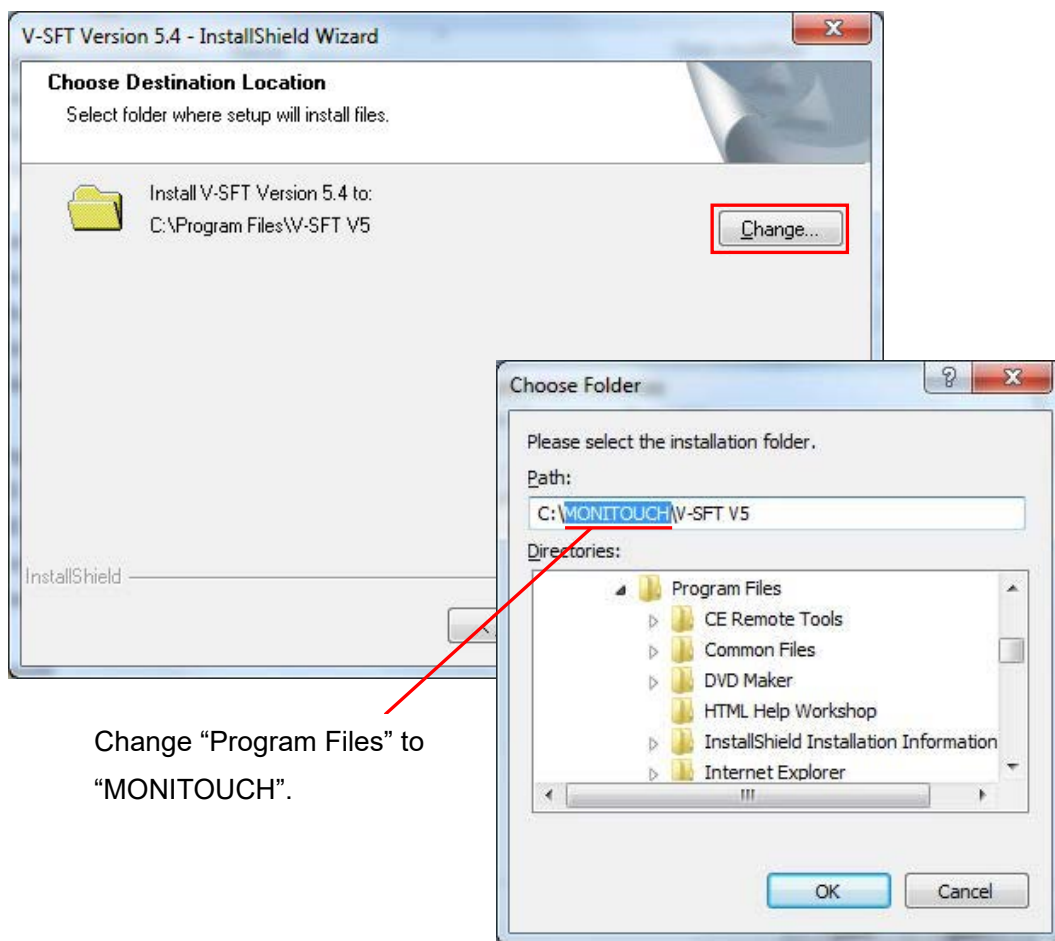

4. Start installation

In the [Ready to Install the Program] dialog, click [Install] to start the installation.

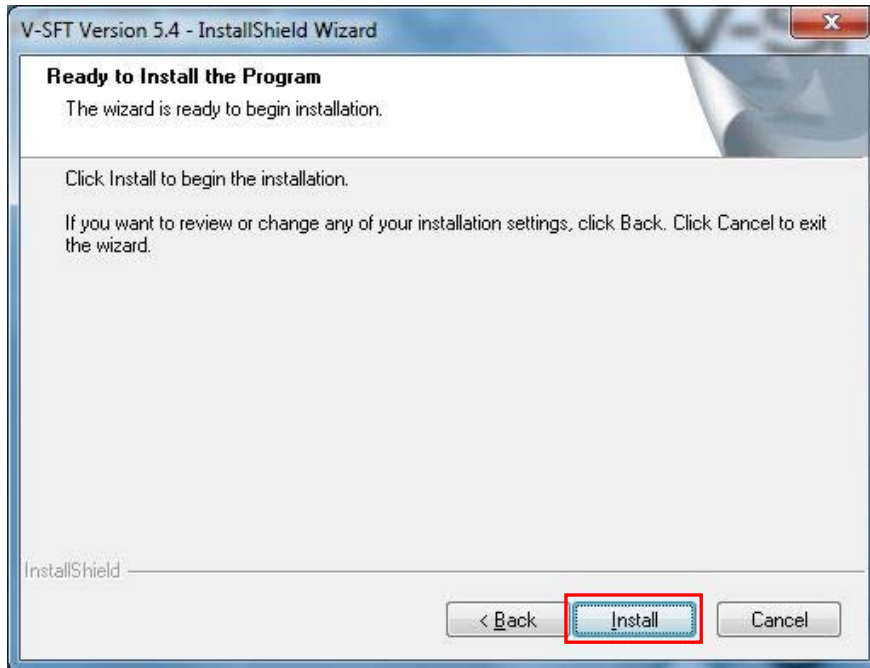

5. Implementation of update

Upon the completion of the installation in step 4, update V-SFT editor.

Refer to "Update Procedure" on page 6.

<Update Procedure>


\* Install the V-SFT editor with authorization of administrator.

- When updating V-SFT to Ver. 6:

Unzip update programs downloaded from our website and execute "setup.exe" in the "Disk1" folder.

Follow the procedures to update after the installer is started up.


Do not change the destination from the default.

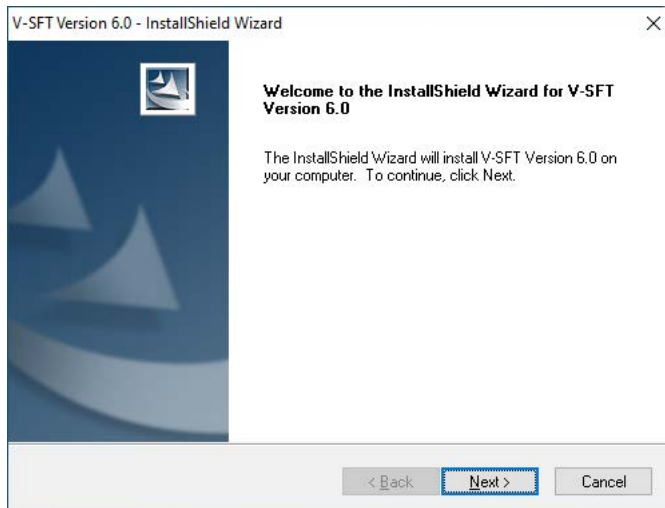

- When updating V-SFT to Ver. 5:

Execute "V-SFT\_V54xx0\_up.EXE" downloaded from our website and follow the installer for instructions.

Do not change the destination from the default.

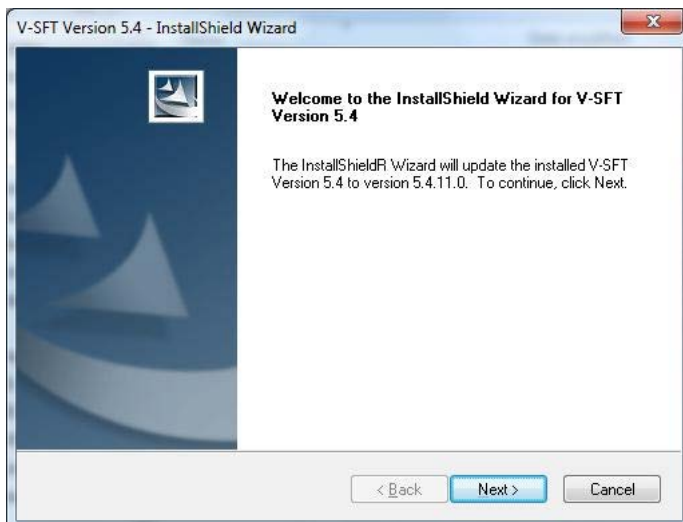

V-SFT Ver. 6/ Ver. 5 is ready to use on Windows Vista or later once installation is completed.

\* For the detailed procedure for installation, see the instruction "V-SFT Ver.6 Update Procedure" or "V-SFT Ver.5 Update Procedure".

(Note)

When updating V-SFT to Ver. 6/ Ver. 5, it is necessary to download manuals for the Help menu from our website.

Execute "VSFTV6\_Manual\_ENG.EXE" or "VSFTV6\_Manual\_OTHER.EXE" (Chinese Simplified / Chinese Traditional / Korean) or "VSFTV5\_Manual.EXE" download from our website and follow the installer for instructions.